



Dyson Cinetic Animal Canister Opening Mechanism Replacement

This guide will instruct you on how to replace the curved red plastic bar at the back of the canister.

Written By: Allison Turnbaugh



INTRODUCTION

This piece allows you to open the canister and remove vacuumed debris. The canister opening mechanism is an important piece to keep your vacuum running smoothly.



PARTS:

- [Dyson DC47 Cinetic Animal Opening Piece](#) (1)
-

Step 1 — Dyson Cinetic Animal Disassembly



- Press the gray button to release the canister.

Step 2



- Remove the canister by lifting it out.

Step 3 — Canister Opening Mechanism



- Turn canister around to find red upside down "U" shaped bar.
- ⓘ If the red bar is broken, pull the pieces out.

To reassemble your device, simply put canister back onto the vacuum body.

This document was last generated on 2017-07-09 04:28:19 PM.